

Instructie Yealink Wh6x headset ringtone inschakelen


v260421MT

Koldingweg 19-1
9723 HL Groningen


Postbus 5236
9700 GE Groningen

T (050) 820 00 00
F (050) 820 00 08
E aanvraag@callvoip.nl
W www.callvoip.nl

1. Zorg eerst dat je de WH6x headset hebt aangesloten op je Yealink telefoon en dat deze goed werkt.
2. Op de computer, download en installeer het programma Yealink USB Connect:
<https://www.yealink.com/product/yuc>

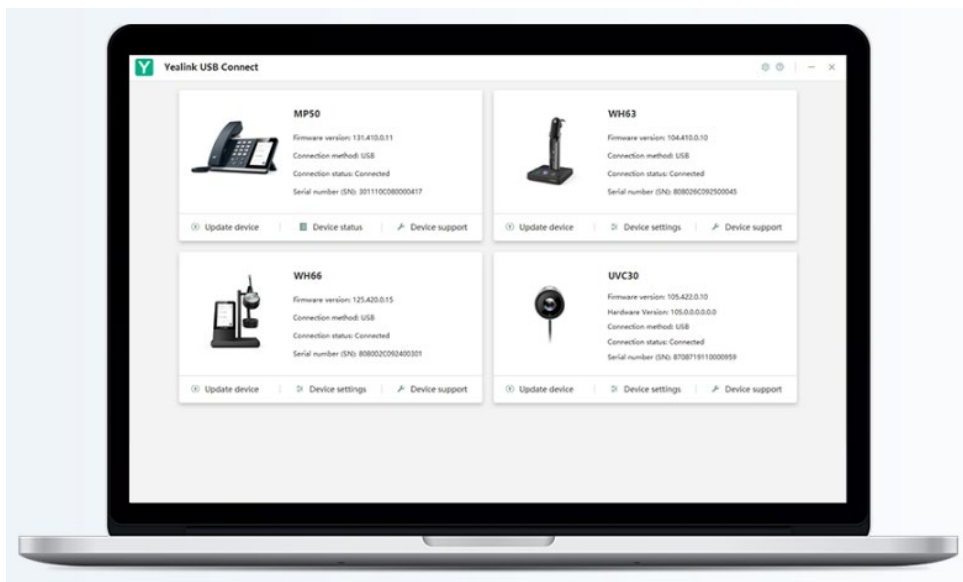

3. Klik op de WH6x headset en zet de LOCAL RINGER op ENABLED en zet deze op de gewenste sterkte.

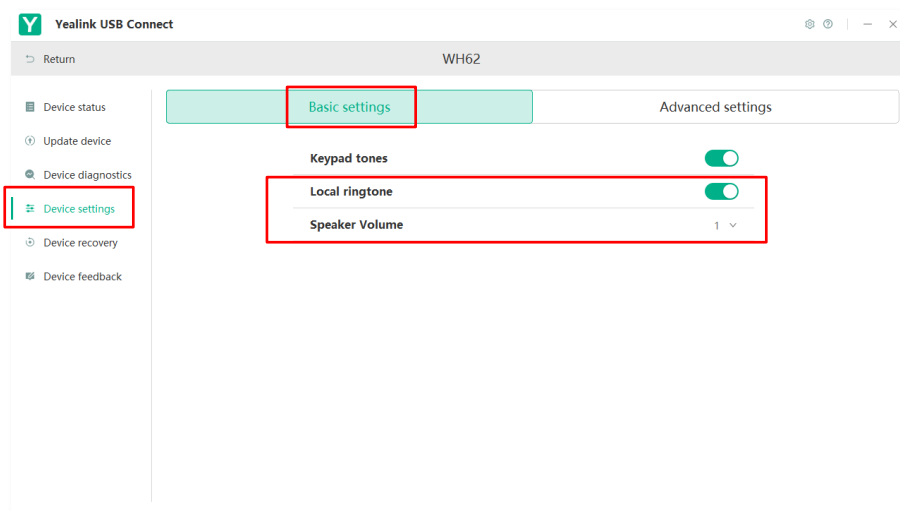

ING BANK 5041280
IBAN NL66INGB0005041280
BIC INGBNL2A
KVK 02066541
BTW NL1041.63.252.B01

- Log dan in op je Yealink IP telefoon
Ga naar menu FEATURES → AUDIO
Zet RINGER DEVICE for HEADSET op USE HEADSET & SPEAKER

Yealink | T54S

Log Out English(English)

Status Account Network Dsskey **Features** Settings Directory Security

Forward&DND
General Information
Audio
Intercom
Transfer
Pick up & Park
Remote Control
Phone Lock
ACD
SMS
Action URL
Bluetooth
Power LED
Notification Popups

Audio Settings

Call Waiting Tone Disabled ?
Key Tone Enabled ?
Send Tone Enabled ?
Redial Tone ?
Headset Send Volume (-50~50) 0 ?
Handset Send Volume (-50~50) 0 ?
Handsfree Send Volume (-50~50) 0 ?
Ringer Device for Headset Use Speaker ?
Use Headset
Use Headset & Speaker

Confirm

NOTE

Tone
Enables or disables the IP phone to play call waiting tone, key tone and send tone.

Redial Tone
It allows IP phones to continue to play the dial tone after inputting the preset numbers on the dialing screen.

Ringer Device for Headset
Selects speaker or/and headset as the ringer devices.

Click here to get more product documents.

Copyright © 2021 ** Inc. All rights reserved.

- Test of het nu goed werkt!



Callvoip
Koldingweg 19-1
9723 HL GRONINGEN

T: 050 – 820 00 00
F: 050 – 820 00 08

@: callvoip@callvoip.nl
W: www.callvoip.nl

